

# **INSTALLATION UPDATE**


## **Ti2 AND ELITE TWEETER MOUNTING**

# **PHOENIX GOLD**

For Ti2 and Elite tweeter installations that do not require the aluminum housing or where space is limited (OEM locations), the raw tweeter can be removed from the housing.

On the rear of the housing simply remove the screw by turning counter clockwise. The raw tweeter is now removable from the aluminum housing.

**Step 1 - Remove the rear mounting screw.**

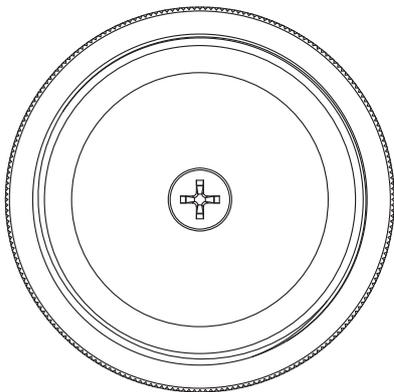

**Step 2 - Remove the raw tweeter from the housing.**

