



ZEROpoint Buss Bars

Installation Instructions

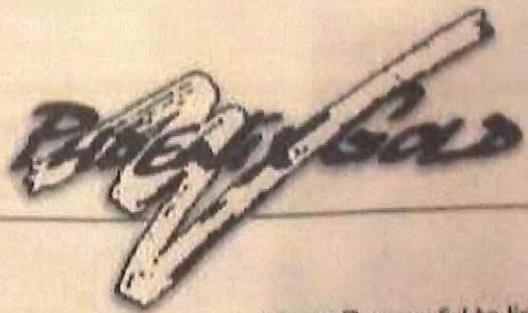

Note: Be careful to line up the Voltage Monitoring LED with its corresponding hole when re-attaching the cover.

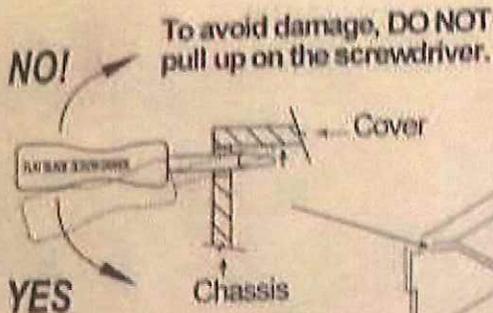

Note: Wrap the tip of your screwdriver with electrical tape to avoid scratching the powder coated surface of the ZBB cover.

Voltage Monitoring LED*

Red: Hi voltage >14.65

Green: Normal voltage 11.65 - 14.65

Orange: Low voltage <11.65

* Voltage thresholds may vary by $\pm .15$ volts

Phoenix Gold PGU Fuses

Available in 1, 3, 5, 8, 10, 20, 30, 40, 50 and 60 amp sizes.

Note: For models using dual fuses for a single output, use equal amperage fuses.

For Example: For 100 amps, use two 50 amp fuses. Do not use a 60 amp and 40 amp fuse.

Output Jack for Optional ZRDT3

Allows remote mounting of a Voltage Monitoring LED. See your local authorized Phoenix Gold Dealer for details. Available May '98!

Up to 4 Gauge Outputs

10 gauge chassis ground wire.

1/0 Gauge Input

Fuse Status LEDs

Green: Fuse OK

Red: Fuse open

Monitoring Circuits Switch

On: All monitoring LEDs active.

Current draw: 100 mA

Off: No LEDs active. Recommended if the engine isn't run at least once a week.

Current draw: 0 Amps

ZEROpoint

Phoenix Gold International, Inc.

9300 North Decatur - Portland, OR 97203 - Tel: 503.288.2008 - Fax: 503.978.3380